


Getting Started Guide

AWR Advantage & AWR Advantage Plus

AWR
ADVANTAGE

AWR
ADVANTAGE
Plus

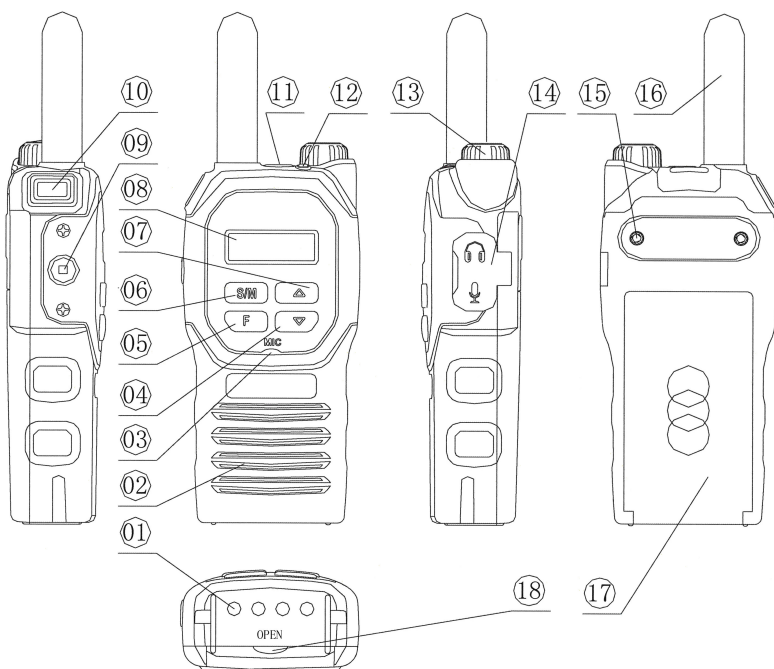

1. **Charger Terminal**
2. **Speaker**
3. **Microphone**
4. **▼, Channel Down Key** - Select item key in local setting Mode
5. **F**, Programmable function key - Default: Key Lock @long press, Flashlight @short press, Exit current status key in local setting mode
6. **S/M**, Programmable function key - Default: Menu @long press, Scan @short press
7. **▲, Channel Up Key** - Select item key in local programming Mode
8. **LCD display** - refer to the below symbols list.
9. **SF2**, Programmable function key - Default: Channel view @short press, Monitor @long press
10. **SF1**, Programmable function key - default: PTT
11. **LED Flashlight**
12. **LED Indicator (Tx & Busy)**
13. **Power switch/ Volume Knob**
14. **Head set Jack /Programming Cable Jack**
15. **Belt clip screw hole**
16. **Antenna**
17. **Battery cover**
18. **Open slot for battery cover**

Bluetooth Pairing

Only Available on the AWR Advantage Plus Two-Way Radio

1. Press and hold the Side Function 2 button while turning the unit on.
2. Once the radio screen displays "Link ---" you may release the side key and the LED will flash blue.
3. Follow the pairing instructions for the Bluetooth headset being used. The 'Pairing' process will take approximately 35 seconds.
4. The headset will speak "device is connected" and the radio screen will say "blue ok" when the radio and headset are paired.
5. Press the Radio Push to Talk button to initiate a transmission while speaking into the Bluetooth headset.



(800) 475-5852
20809 Kensington Blvd, Lakeville, MN 55044
www.advancedwireless.com
f t in